


HYDROTRUE® VAPOR-LOGIC EXTERNAL CONTROL CONNECTIONS DIAGRAM

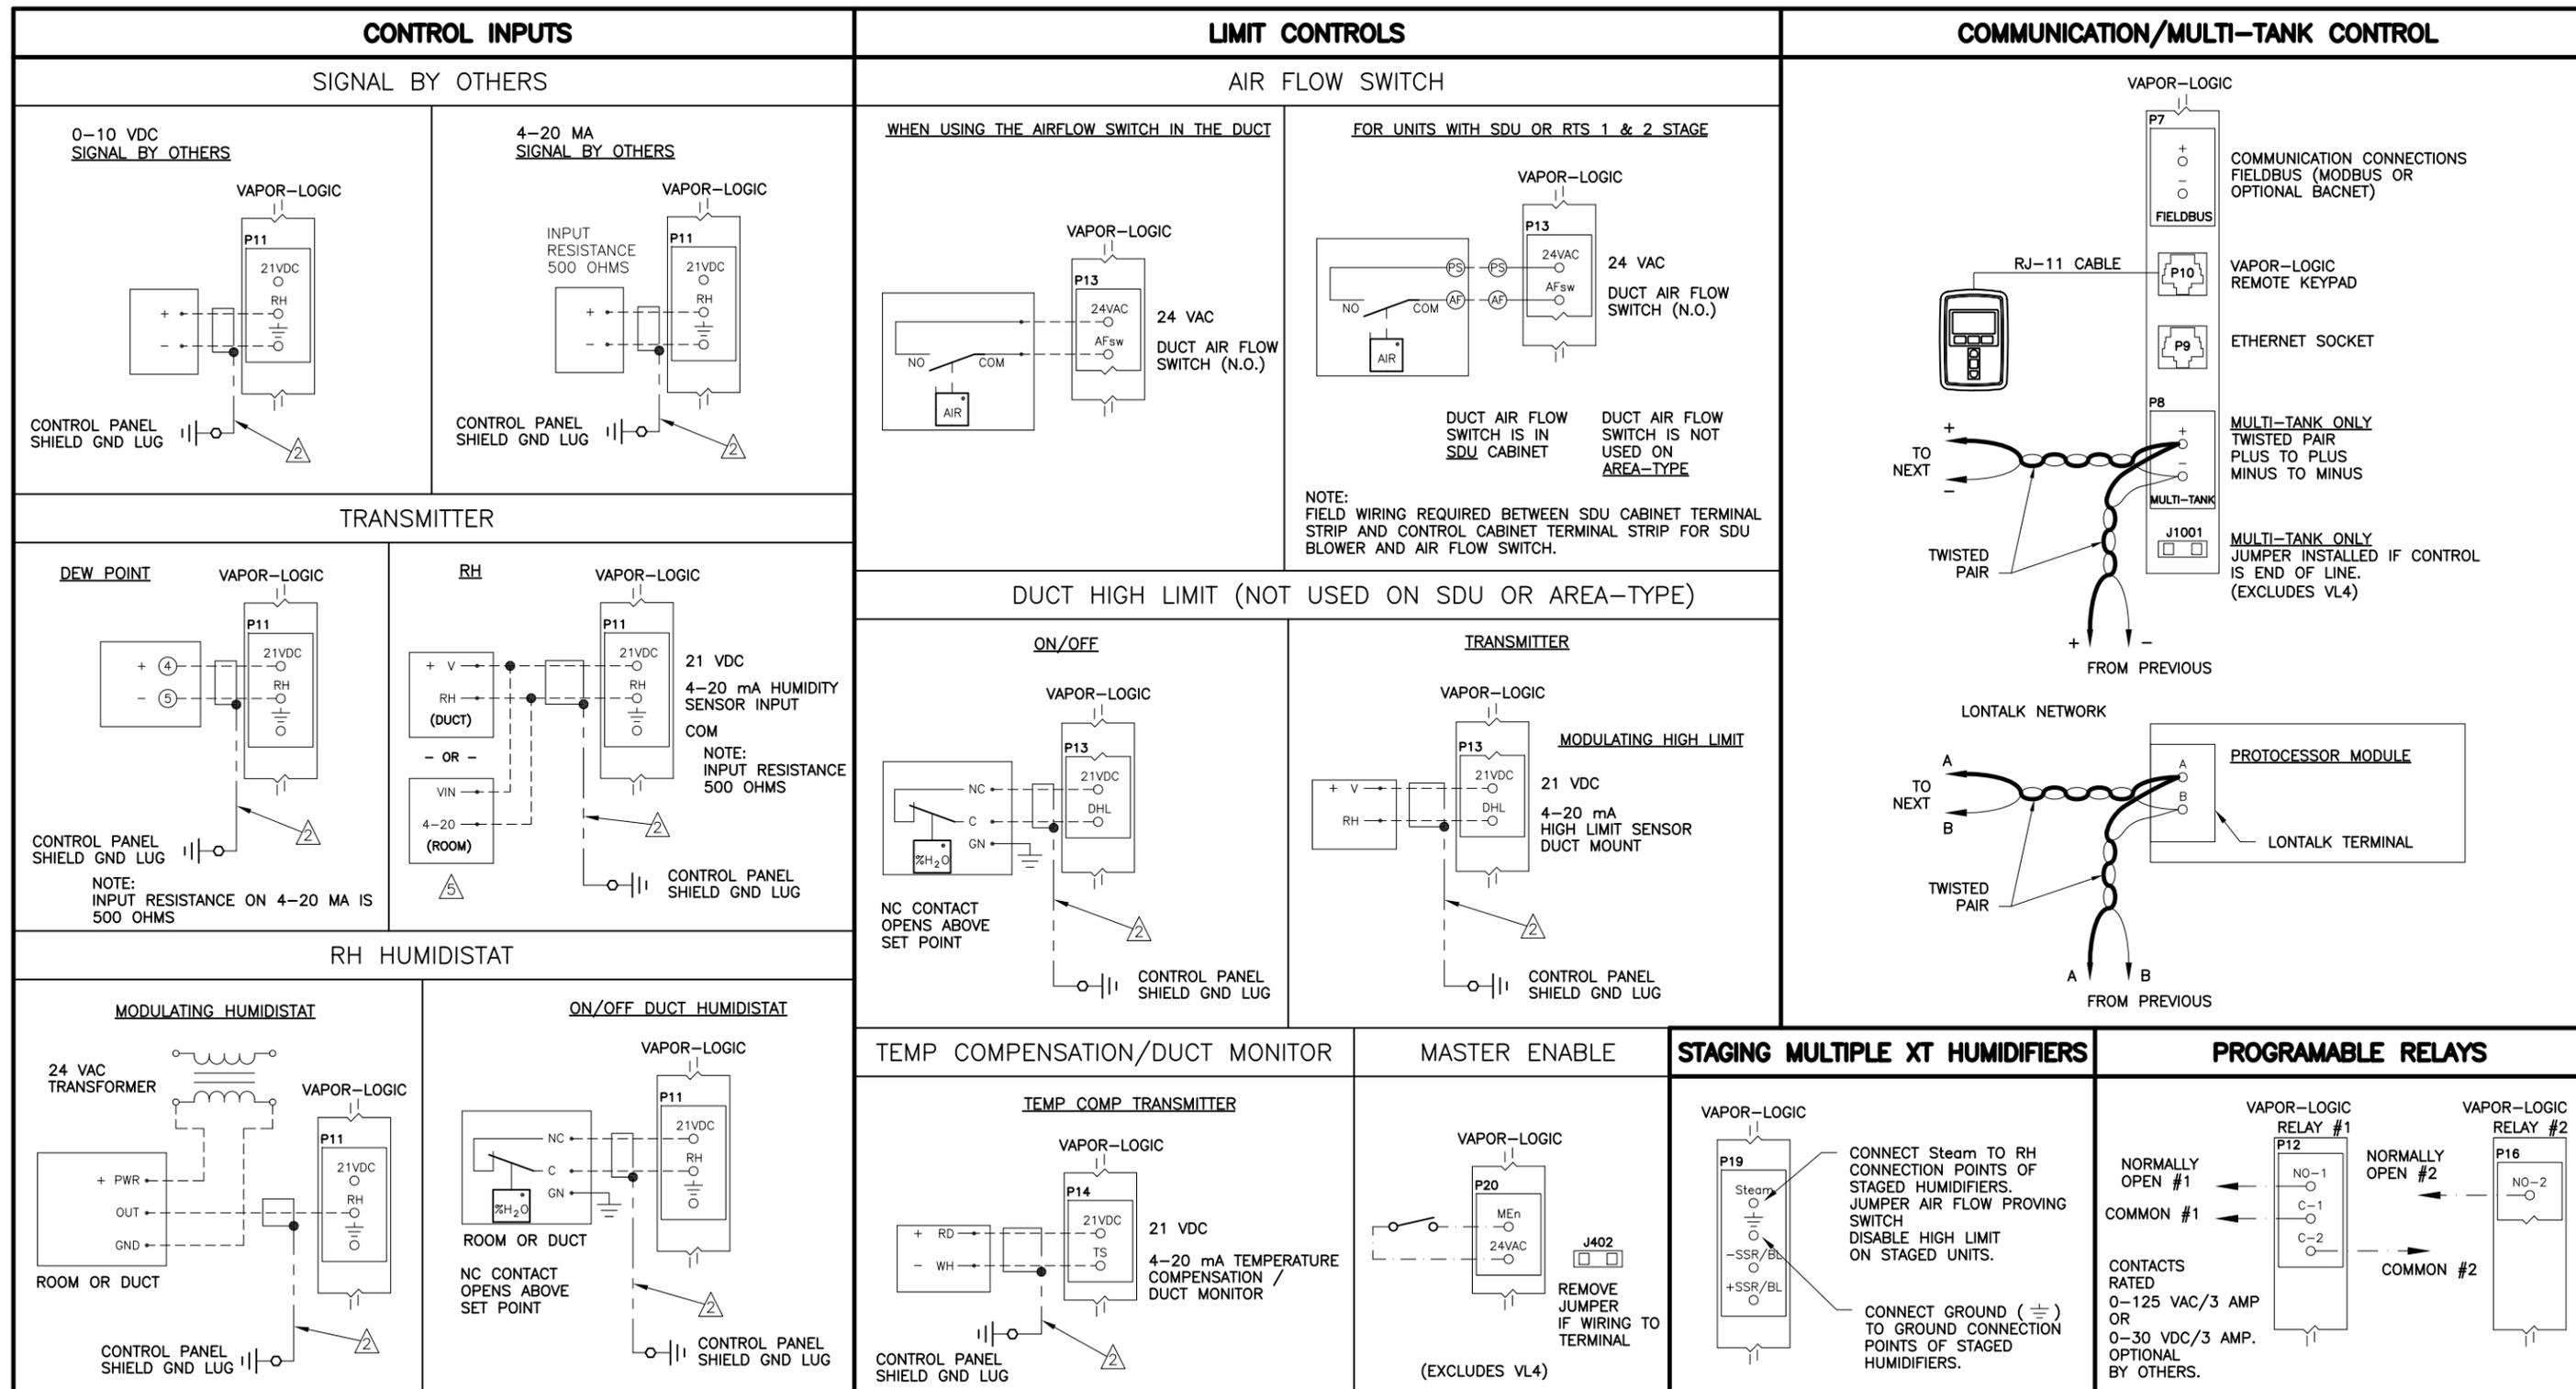

NOTES:

1. CHANGING CONTROL INPUT SIGNAL MAY REQUIRE WIRING CHANGE AND PROGRAM CHANGE. REFER TO VAPOR-LOGIC INSTALLATION AND OPERATION MANUAL (IOM), KEYPAD INPUT SELECTION SUB-MENU.
2. FOR ALL CONTROL DEVICES, EXCEPT WATER LEVEL CONTROLS/PROBE USE: 18 AWG/1.5 mm² PLENUM RATED 2-WIRE SHIELDED CABLE.

3. THIS PRODUCT WAS FACTORY TESTED FOR PROPER OPERATION. FAULTY HANDLING OR WIRING IS NOT COVERED UNDER WARRANTY.
4. REMOVE POWER BEFORE WIRING CONNECTIONS.
5. REFER TO TRANSMITTER INSTALL INSTRUCTIONS.

BREAK TO EXTERNAL CONNECTIONS DIAGRAM

CONTROL CIRCUIT WIRING
 FIELD WIRING
 OPTIONAL FACTORY WIRING
 OPTIONAL FIELD WIRING